Miele

Operating and installation instructions

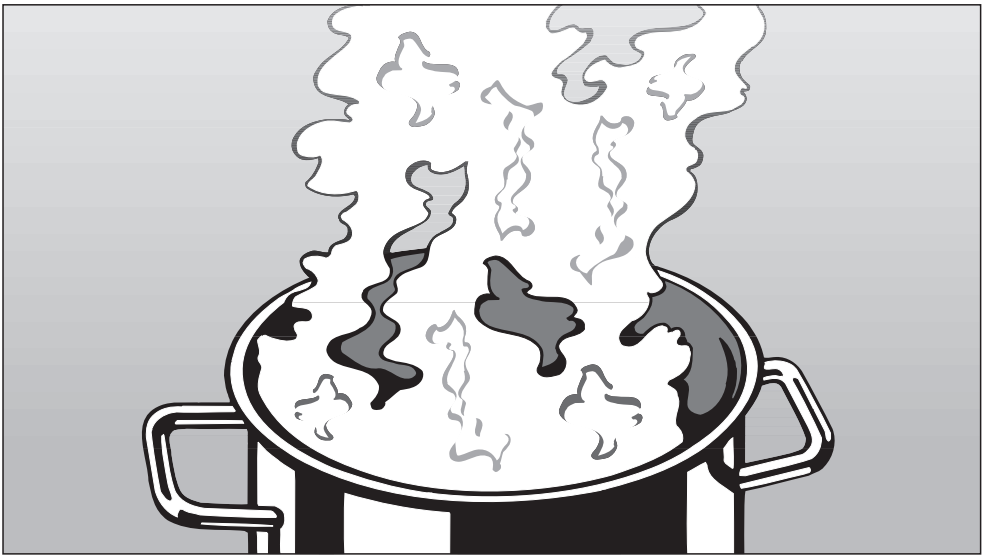

Cooker hood
DA 5330 W

To avoid the risk of accidents or damage to this appliance, it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 09 203 290

Contents

Caring for the environment 4
Warning and Safety instructions 5
Modes of operation 11
Guide to the appliance 12
Miele@home 14
Con@ctivity 14
Operation 15
To switch a fan on 15
To select a power level 15
Intensive setting 15
Run-on option 16
To switch the fan off 16
To switch the hob lighting on 17
To dim the hob lighting 17
To switch the hob lighting off 17
Filter operating hours counters 17
Cleaning and care 21
Housing 21
Grease filters 22
Fitting and replacing the charcoal filters 24
Changing a halogen lamp 25
Appliance dimensions 26
Safety distance between hob and cooker hood (S) 27
Installation 28
Installation accessories 28
Installation instructions 30
Protective foil 30
Dismantling 30
Connection for air extraction 31
Condensate trap 32
Silencer 33
Electrical connection 34

Contents

Operation with Control module DSM 400 35
Potential free connection 35
Connection to a light switch 35
After Sales Service 36
Technical data 37

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Packaging e.g. cling film, polystyrene and plastic wrappings must be kept out of the reach of babies and young children. Danger of suffocation!

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

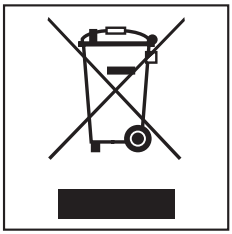

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important information on the safety, installation, use and maintenance of the appliance.

Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Correct application

▶ This appliance is not designed for commercial use. It is intended for use in domestic households and for use in similar working and residential environments such as:

– Shops

– Offices and showrooms

and by residents in establishments such as

– Hostels and guesthouses

▶ It must only be used as a domestic appliance to extract vapours and remove odours from cooking.

▶ The cooker hood is not intended for outdoor use.

Any other usage is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation of the appliance.

▶ This appliance is not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it correctly by a person responsible for their safety.

Safety with children

▶ This appliance is only intended for use by adults who have read these instructions.

▶ This appliance is not a toy! To prevent the risk of injury do not let children play with the appliance or its controls.

▶ Children under 8 years of age must be kept away from the cooker hood unless they are constantly supervised.

▶ Children 8 years and older may use the cooker hood only if they have been shown how to use it in a safe way and understand the hazards involved.

▶ Please be aware that on cooker hoods with halogen lighting, the lamps will get very hot during use and remain hot for some time after switching off. To safeguard against burning, keep children well away from the lamps at all times.

Technical safety

▶ Before installation, check the cooker hood for visible signs of damage. Under no circumstances should you use a damaged appliance. A damaged appliance is dangerous.

▶ Before connecting the appliance to the mains supply, make sure that the voltage and frequency details given on the data plate correspond with the on-site electricity supply, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.

▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ For safety reasons, this appliance may only be used when it has been fully installed.

▶ Only open the housing as described in the instructions given in the installation sheet. Under no circumstances should any other parts of the housing be opened. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user, and can cause operational faults.

▶ Installation, maintenance and repairs may only be carried out by a Miele authorised person in accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ Faulty components must only be replaced by genuine Miele original parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ This appliance must not be used in a non-stationary location (e.g. on a ship).

▶ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Using at the same time as other heating appliances that depend on the air from the room

Warning - danger of toxic fumes

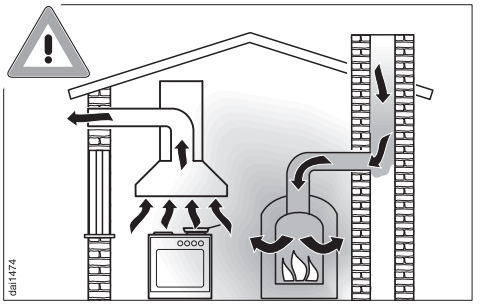

▶ Great care should be taken when using the cooker hood at the same time and in the same room or area of the house as another heating appliance which depends on the air in the room. Such appliances include gas, oil, wood or coal-fired boilers and heaters, continuous flow or other water heaters, gas hobs, cookers or ovens which draw air in from the room and duct exhaust gases out through a chimney or extraction ducting.
When used in extraction mode, the appliance draws air in from the room in which it is installed **and** from neighbouring rooms.
If there is insufficient air, an underpressure will occur. The heating appliance may be starved of oxygen, impairing combustion.

Harmful gases could be drawn out of the chimney or extraction ducting back into the room, with potentially fatal consequences.

In order to ensure safe operation, and to prevent gases given off by the heating appliances from being drawn back into the room when the cooker hood and the heater are in operation simultaneously, an underpressure in the room of 0.04 mbar (4 pa) is the maximum permissible.

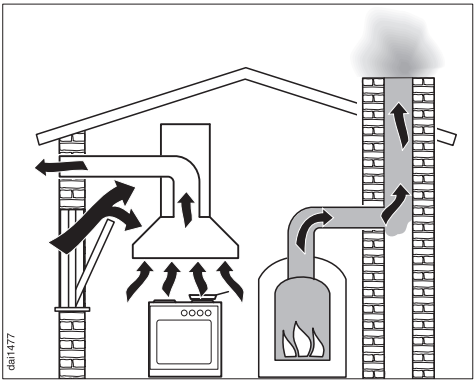

Ventilation can be maintained by air inlets which cannot be blocked, in windows, doors and outside wall vents, or by other technical measures, such as ensuring that the cooker hood can only be switched on when the heating appliance is switched off or vice versa. A ventilation brick alone is not generally sufficient to ensure safe ventilation.

⚠ The overall ventilation condition of the dwelling must be taken into account. If in any doubt, the advice of a competent builder or, for gas, a "Corgi" installer, must be sought.

If the hood is being operated in recirculation mode, the above restrictions do not apply.

Correct use

▶ Never use an open flame beneath the cooker hood. To avoid the danger of fire, do not flambé or grill over an open flame under the cooker hood. When switched on, the cooker hood could draw flames into the filter. Fat particles drawn into the cooker hood present a fire hazard.

▶ When using the cooker hood over a gas hob, ensure that any burners in use are always covered by a pan. Switch the cooking zone off when a pan is removed, even for a short time. Regulate the flame so that it does not burn up the sides of the pan.
Do not allow the pans to overheat excessively (e.g. when using a wok). The cooker hood can become damaged when exposed to excessive heat.

▶ Always switch the cooker hood on when a cooking zone is in use, otherwise condensation may collect in the hood, which could cause corrosion.

▶ When cooking with oil or fat, chip pans and deep fat fryers etc, do not leave the pans unattended. Never leave an open grill unattended when grilling. Overheated oil and fat can ignite and could set the cooker hood on fire.

▶ Do not use the cooker hood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.

▶ The filters should be regularly cleaned or changed as appropriate. Saturated filters are a fire hazard. See "Cleaning and care".

▶ The cooker hood can get very hot during cooking due to heat rising from the hob.
Do not touch the housing or the grease filters until the cooker hood has cooled down.

▶ Do not use a steam-cleaner to clean this appliance. Pressurised steam could reach the electrical components and cause a short circuit.

Correct installation

▶ Refer to the cooker or hob manufacturer's instructions as to whether a cooker hood may be operated above the cooker/hob.

▶ The minimum safety distances between the top of the cooker or hob and the bottom of the cooker hood given in the "Appliance dimensions" section of this booklet must be maintained, unless the hob manufacturer states that a greater safety distance is required.

If more than one appliance is fitted beneath the cooker hood and they have different minimum safety distances to the cooker hood, select the greater distance.

▶ Safety regulations prohibit the fitting of a cooker hood over solid fuel stoves.

▶ All ducting, pipework and fittings must be of non-flammable material. These can be obtained from the Miele Spare Parts department or from builders' merchants.

▶ The appliance must not be connected to a chimney or vent flue which is in use. Neither should it be connected to ducting which ventilates rooms with fireplaces.

▶ If exhaust air is to be extracted into a chimney or ventilation duct no longer used for other purposes, seek professional advice.

Accessories

▶ Only use genuine Miele spare parts and accessories with this appliance. If spare parts or accessories from other manufacturers are used, this will invalidate the guarantee, and Miele cannot accept liability.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

The cooker hood works with

. . . air extraction:

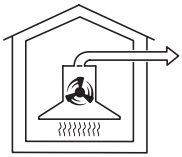

The air is drawn in, cleaned by the grease filters and directed outside.

If the on-site ventilation system is not already fitted with **non-return flaps**, then the two non-return flaps supplied with the appliance must be fitted in the exhaust sockets in the motor units.

The flaps are closed when the cooker hood is switched off. No exchange of room and outside air can take place.

When the cooker hood is switched on, the non-return flaps open for the cooking vapours to be blown directly outside.

. . . air recirculation:

(requires a conversion kit and charcoal filters: see "Technical data")

The air is drawn in and cleaned first by the grease filters and then by **charcoal filters** . The cleaned air is then recirculated back into the kitchen through grilles in the top of the cooker hood extension pieces.

Before using the cooker hood in recirculation mode, ensure that the charcoal filters are in place. See "Cleaning and care"

Guide to the appliance

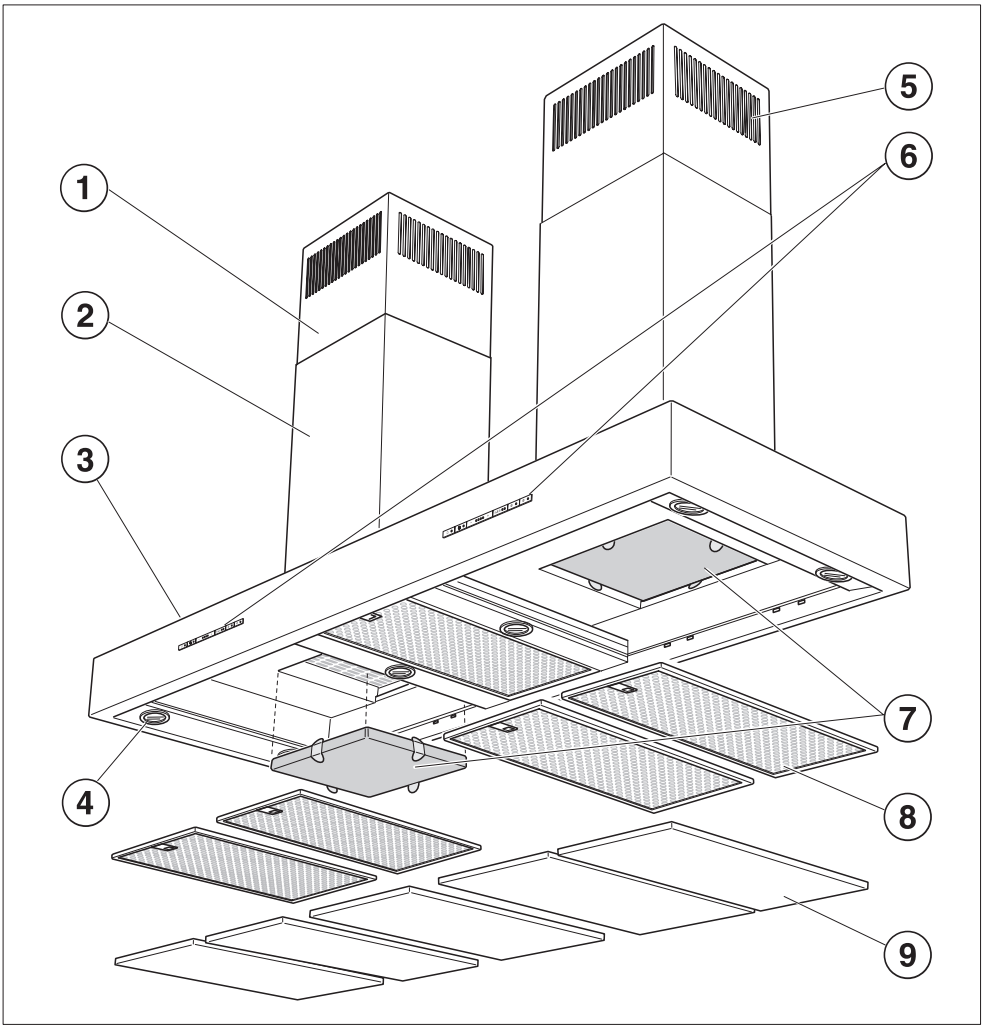

dai2194

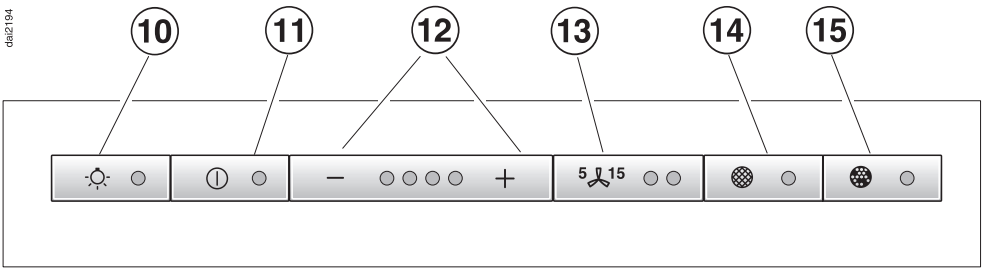

① **Telescopic extension piece**

② **Tower**

③ **Canopy**

④ **Hob lighting**

⑤ **Recirculation grille**

(only for recirculation mode)

⑥ **Controls**

The two sides of the cooker hood can be operated independently of one another.

⑦ **Charcoal filter**

(special accessory for recirculation mode)

⑧ **Grease filters**

⑨ **Cover panels** Miele DDW 53x0

(optional accessory)

Five cover panels are required in order to conceal all of the grease filters.

⑩ **Touch control for the hob lighting**

This control switches the lighting on and off, and is also a dimmer switch.

⑪ **On/Off touch control for the fan**

⑫ **Touch controls to select fan power level**

⑬ **Touch control for the run-on option**

To activate the run-on option. The fan can be set to continue running, and to switch off automatically after either 5 or 15 minutes.

⑭ **Touch control for the grease filters**

The indicator lamp on the grease filter touch control lights up when the grease filters need to be cleaned.

The touch control is used to reset the operating hours counter every time the grease filters are cleaned (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

⑮ **Touch control for the charcoal filters**

The indicator lamps on the charcoal filter touch control lights up when the charcoal filters used in recirculation mode need to be replaced. For this to happen, the operating hours counter needs to be activated before the appliance is used for the first time.

The touch control is used to reset the operating hours counter every time the charcoal filters are replaced (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

For information about using the appliance, see "Operation".

Con@ctivity

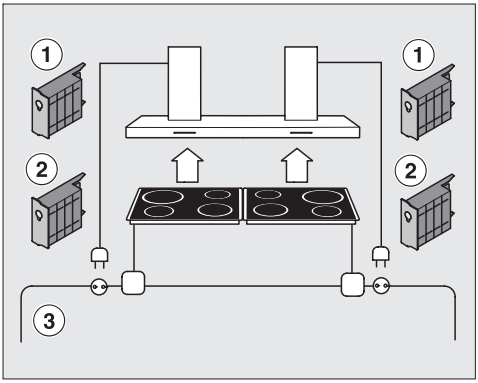

This cooker hood is communication enabled.

The communication modules XKM 2000 DA ①, available as an optional extra, enable the operation of the cooker hood to be automatically controlled by the operating status of a Miele electric hob with onset controls.

This cooker hood operates with two fans. Each side has its own controls. Each side can communicate with a separate hob.
For communication to take place, both hobs must be fitted with an appropriate communication module ②.

The hobs transmit information about their operating status to the cooker hood via the household power supply (Powerline) ③.

– When a hob is switched on, the applicable side of the cooker hood will light up and the fan will come on.
– During cooking, the cooker hood automatically sets its power level according to the number of cooking zones in operation and their power levels.
– After the hob has been switched off, the fan and the lighting on the cooker hood will switch off automatically after a period of time.

For detailed information about this function please read the separate instruction booklet supplied with the XKM 2000 DA communication module.

The communication modules are fitted to the cooker hood in the area of the motor and are connected to the controls of the cooker hood.

This module must be installed by a Miele service technician or suitably qualified electrician.

The two sides of the cooker hood can be operated independently of one another.

To switch a fan on



■ Press the On/Off control.

The fan selected will come on at power level II. The indicator lamp will come on.

To select a power level



■ Use the **–** / **+** controls to select the power level required.

+ control = higher setting
– control = lower setting

Depending on the intensity of the cooking vapours, levels I to III are usually sufficient for normal cooking.

Intensive setting

When frying or cooking food with a strong aroma, you may wish to select the Intensive setting, level IV, for a short period.

Automatic switch-off of the Intensive setting

You can set the Intensive setting so that it only runs for 10 minutes before reverting automatically to level III.

■ To set this option, both the fan and the hob lighting must be switched off.

■ Press the run-on option control for approx. 10 seconds. The first power level indicator lamp will light up in the display.

■ Then press in turn,

– the hob lighting control,

– the **–** control, and

– finally the hob lighting control again.

The indicator lamps for fan power levels I and IV will flash if the automatic switch-off for the Intensive setting is not activated.

- Press the **+** control to activate automatic switch-off.
  The indicator lamps for fan power levels I and IV will now light up constantly.
  Press the **–** control to deactivate the automatic switch-off function.

- Press the run-on option control to confirm your selection.

If you do not confirm your selection within 4 minutes, the cooker hood will automatically revert to the "old" setting.

Run-on option

It is advisable to run the fan for a few minutes after cooking has finished to neutralise any lingering odours in the air, whether you are using air extraction or recirculation mode.

The fan can be set to switch off automatically after either 5 or 15 minutes.

- After cooking has finished, press the run-on option control whilst the fan is still running.

– Press once = The fan will switch off after 5 minutes (left-hand indicator lamp).

– Press twice = The fan will switch off after 15 minutes (right-hand indicator lamp).

To switch off the run-on option, press the run-on option control again. The appliance will then not switch off automatically.

To switch the fan off



- Press the On/Off control to switch the fan off.

The indicator lamp will go out.

To switch the hob lighting on

The hob lighting can be switched on and off independently of the fan.

- Briefly press the lighting control to switch on the hob lighting.

The indicator lamp will come on.

The hob lighting will switch on at maximum brightness.

To dim the hob lighting

The brightness of the lighting can be adjusted.

- With the lighting switched on, press and hold the hob lighting control in. The brightness will gradually dim until you release the control.
- Press the control in again to increase the brightness to the level required, and then release it.

If you keep the control pressed in, the light will continually change between bright and dim.

To switch the hob lighting off

- Press the hob lighting control briefly to switch the lighting off.

Safety cut-out

Should the cooker hood be left on, the fan will switch off automatically after 10 hours. The lighting will remain on.



- Pressing the On/Off control will switch the fan back on again.

Filter operating hours counters

The number of hours the appliance has been in operation is stored in memory.

The operating hours counters tell you when the grease filters or charcoal filters need to be cleaned or replaced.

Resetting the grease filter operating hours counter

After 30 hours of operation (or another time if the operating hours counter has been altered), one of the two grease filter indicator lamps will light up.

All the grease filters must then be cleaned.

After cleaning and replacing the grease filters, the grease filter operating counter must be reset.

- To do this, while the fan is switched on, press and hold the grease filter control until only the first of the **–** / **+** indicator lamps is flashing.
- The grease filter counter on the other set of controls must also be reset in the same way, even if this operating hours counter has not yet reached its maximum.

Reading the grease filter operating hours counter

To check the percentage of time set already used:



- Press the On/Off control to switch the fan on.



- Press and hold the grease filter control.

One or more of the indicator lamps for the **–** / **+** controls will flash.

The number of flashing lamps shows the percentage of the operating time which has already been used up.

1 lamp = 25 %
2 lamps = 50 %
3 lamps = 75 %
4 lamps = 100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

Altering the grease filter operating hours counter

The grease filter operating hours counter is set at the factory for 30 hours. This can be lengthened or shortened to suit the type of cooking you do. You can choose 20, 30, 40 or 50 hours.

– Select a short time if you roast or fry a lot.

– If you use very little fat for cooking, select a longer time.

– If you only cook occasionally we recommend that you still select a short time because grease which has built up gradually over a long period of time will harden on the filter and make cleaning more difficult.

- Press the On/Off control to switch the fan off.

■ Press the run-on option control and the grease filter control at the same time.

The indicator lamp for the grease filter control and one of the **–** / **+** indicator lamps will flash.



The **–** / **+** indicator lamps show the time which has been set:
1st lamp from the left = 20 hours
2nd lamp from the left = 30 hours
3rd lamp from the left = 40 hours
4th lamp from the left = 50 hours

■ Use the **–** / **+** controls to select the desired time.



■ Confirm the selection by pressing the grease filter control.

All the indicator lamps will go out.

If you do not confirm your selection within 4 minutes, the cooker hood will automatically revert to the "old" data.

Activating and altering the charcoal filter operating hours counter

(in recirculation mode)

The charcoal filter is needed for recirculation mode.

On delivery, the operating hours counter for the charcoal filter is **deactivated**.

For recirculation mode, the operating hours counter needs to be set to suit the type of cooking you do:



■ Press the On/Off control to switch the fan off.

■ Press the run-on option and the charcoal filter controls at the same time.

The indicator lamp for the charcoal filter control and one of the **–** / **+** control indicator lamps will flash.



The **–** / **+** control lamps show the time which has been set:
1st lamp from the left = 120 hours
2nd lamp from the left = 180 hours
3rd lamp from the left = 240 hours
4th lamp from the left = deactivated

- Use the **–** / **+** controls to select the desired time.



- Confirm the selection by pressing the charcoal filter control.

All the indicator lamps will go out.

If you do not confirm your selection within 4 minutes, the cooker hood will automatically revert to the "old" data.

Resetting the charcoal filter operating hours counter

The indicator lamp for the charcoal filter control will light up after the cooker hood has operated for the number of hours set. The charcoal filter must then be replaced with a new one (see "Cleaning and care").

Afterwards, the charcoal filter operating hours counter must be reset.

- Press and hold the charcoal filter control for about 3 seconds while the fan is switched on.

The indicator lamp for the charcoal filter control will go out.

Reading the charcoal filter operating hours counter

To check the percentage of time set already used:



- Press the On/Off control to switch the fan on.

- Press and hold the charcoal filter control.

One or more of the indicator lamps for the **–** / **+** controls will flash.

The number of flashing lamps shows the percentage of the operating time which has already been used up.

1 lamp = 25 %
2 lamps = 50 %
3 lamps = 75 %
4 lamps = 100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

A range of Miele branded cleaning and conditioning products is available to order from Miele (see back page for details) or via the internet at www.miele-shop.com.

⚠ Before any cleaning or maintenance work is carried out, disconnect the cooker hood from the mains supply.
Please note that this appliance has two electrical connections, and both have to be disconnected for cleaning and maintenance work.

⚠ Halogen lamps get very hot during use and remain hot for some time after being switched off. The hot lamps are also susceptible to damage from damp cleaning. Wait a few minutes after switching off before commencing cleaning.

Housing

General

The surfaces and controls are susceptible to scratches and abrasions. Please observe the following cleaning instructions.

- All external surfaces and controls can be cleaned using an E-Cloth, or with warm water and a little washing-up liquid applied with a well wrung-out soft sponge or cloth.
- Wipe the surfaces dry using a soft cloth.

Do not use too much water when cleaning the controls. Water could penetrate into the electronics and cause damage.

Do not use:

– cleaning agents containing soda, acids, chlorides or solvents,

– abrasive cleaning agents e.g. powder cleaners or cream cleaners, and abrasive sponges, e.g. pot scourers or sponges which have been previously used with abrasive cleaning agents. These will damage the surface material.

Important for appliances with stainless steel housing

(This infomation does not apply to the controls).

Stainless steel surfaces can be cleaned using the Miele E-Cloth or with a suitable, non-abrasive, proprietary cleaning agent for stainless steel, following the manufacturer's instructions on the packaging.

To help prevent re-soiling, a conditioning agent for stainless steel can also be used. Apply sparingly and follow the manufacturer's instructions on the packaging.

Important for appliances with lacquered housing

(special order finish)

It is very difficult to clean this type of surface without causing minor marks to the surface material. This can become particularly noticeable with darker colours and if there is halogen lighting in the kitchen.

Controls

The controls may suffer discolouration or damage if soiling is left on them for too long.
Remove soiling straight away.

Observe the General notes on cleaning earlier in this section.

Do not use stainless steel cleaning agents on the controls.

Grease filters

The re-usable metal grease filters in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the cooker hood.

The grease filters should be cleaned regularly (at least every 3-4 weeks) to avoid a build-up of fat but always clean them as soon as one of the grease filter touch control lamps comes on.

All the grease filters must then be cleaned.

⚠ An oversaturated filter is a fire hazard.

If cover panels are fitted as an optional extra, these need to be removed first.

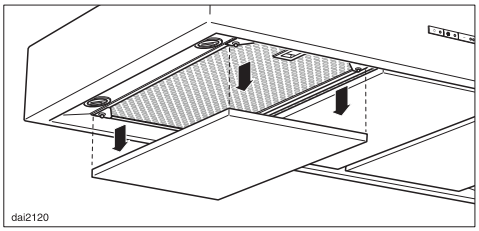

- To do this, disengage them from their catches.
- See the notes under "Housing" for how to clean the cover panels. Like the grease filters, they can be cleaned in the dishwasher.

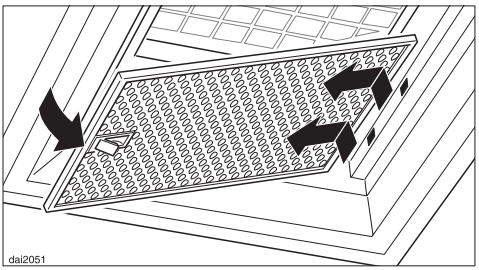

- To take out the grease filters, release the locking clip on the filters, lower the filters 45°, unhook them at the back and remove them.

To avoid damaging the filters or the hob below, make sure you hold the filters securely at all times when handling them.

Cleaning the grease filters by hand

- Clean the filters with a soft nylon brush in a mild solution of hot water and a little washing-up liquid.
  Do not use "neat" washing up liquid.

Do not use:

– cleaning agents containing descaling agents,

– powder cleaners, cream cleaners or abrasive all-purpose cleaning agents,

– oven sprays.

Cleaning the grease filters in the dishwasher

- Place the filters as upright as possible in the lower basket, with the short sides upright. Make sure that the spray arm can move freely.
- Do not wash at more than 65° C. If a Miele dishwasher is being used, select the Sensor wash programme.
- Use a mild dishwasher detergent.

Depending on the cleaning agent used, cleaning the filters in a dishwasher can cause permanent discolouration to the surface. However, this will not affect the functioning of the filters in any way.

- After cleaning, leave the filters to dry on an absorbent surface before replacing them.

When removing the filters for cleaning, also clean off any residues of oil or fat from the now accessible housing to prevent the risk of these catching fire.

When putting the grease filters back in position, ensure that the locking clips are facing down towards the hob.

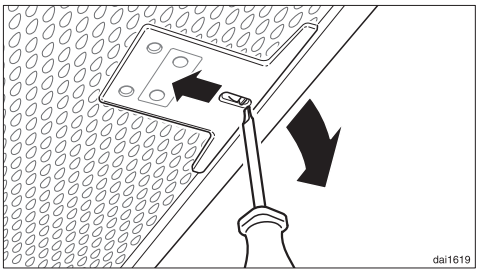

If a grease filter is inadvertently replaced upside down, insert a small screwdriver blade into the slit to disengage the clip.

After cleaning and replacing the grease filters, the grease filter operating counters must be reset.



- To do this, while the fan is switched on, press and hold the grease filter control until only the first of the **–** / **+** indicator lamps is flashing.
- The grease filter counter on the other set of controls must also be reset in the same way, even if this operating hours counter has not yet reached its maximum.

Fitting and replacing the charcoal filters

If the cooker hood is connected for recirculation, a charcoal filter must be inserted into each of the charcoal filter frames above the grease filters in either side of the canopy, in addition to the grease filters. Charcoal filters absorb normal kitchen odours.

New charcoal filters can be purchased from your Miele dealer, from the Miele Spare Parts Department or via the internet on www.miele.co.uk.
See back cover for contact details, and "Technical data" for the model number of the filter.

- Before fitting or replacing the charcoal filters, the grease filters must first be taken out (see previous section for instructions on how to do this).
- Take the charcoal filter out of its packaging.

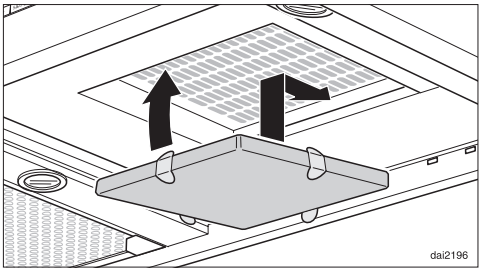

- Insert the charcoal filter into the back of the charcoal filter frame, then push up into the frame at the front.

When fitting for the first time:

- Activate the operating hours counter on both sets of controls (see "Operation").

Always replace the charcoal filters immediately if

– the indicator lamps for the charcoal filter controls light up,

or

– they are no longer effective in absorbing kitchen odours.

They should, however, be replaced at least every 6 months.

Used charcoal filters can be disposed of with the normal household waste.



- After fitting new charcoal filters, press the charcoal filter touch controls for approx. 3 seconds to reset the operating hours counters.
  The charcoal filter indicator lamps will go out.
- If the charcoal filters are replaced **before** the operating hours counters have reached their maximum, the charcoal filter controls should be pressed for approx. 6 seconds to reset the counters.

Changing a halogen lamp

- Before any cleaning or maintenance work, disconnect the cooker hood from the mains supply.

Please note that this appliance has two electrical connections, and both have to be disconnected for cleaning or maintenance work.

⚠ Exercise caution when changing halogen lamps. They get very hot during use and remain hot for some time after being switched off. Let them cool down before you change them.

⚠ Do not touch the surface directly when changing a lamp, as grease particles from your fingers will adhere to the surface and damage it. Please follow the manufacturer's instructions.

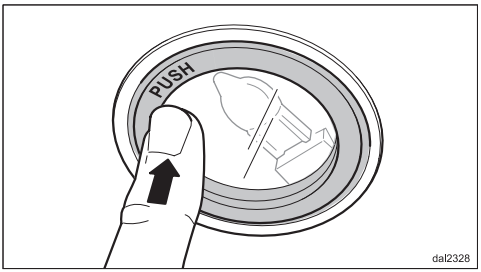

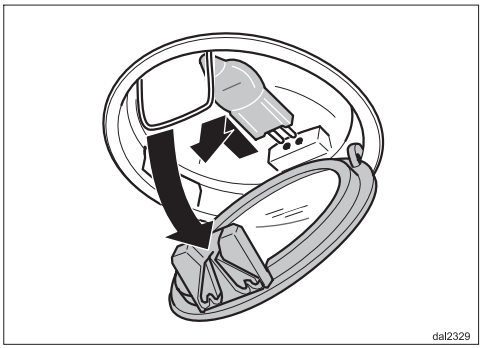

- To access the halogen lamp, push the lamp cover gently upwards. The cover will open and can be pulled down.
- Pull the old halogen lamp out of the connection socket and replace it with a new one (20 W, G 4 fitting).
- Push the cover back up and make sure it clicks into place.

Appliance dimensions

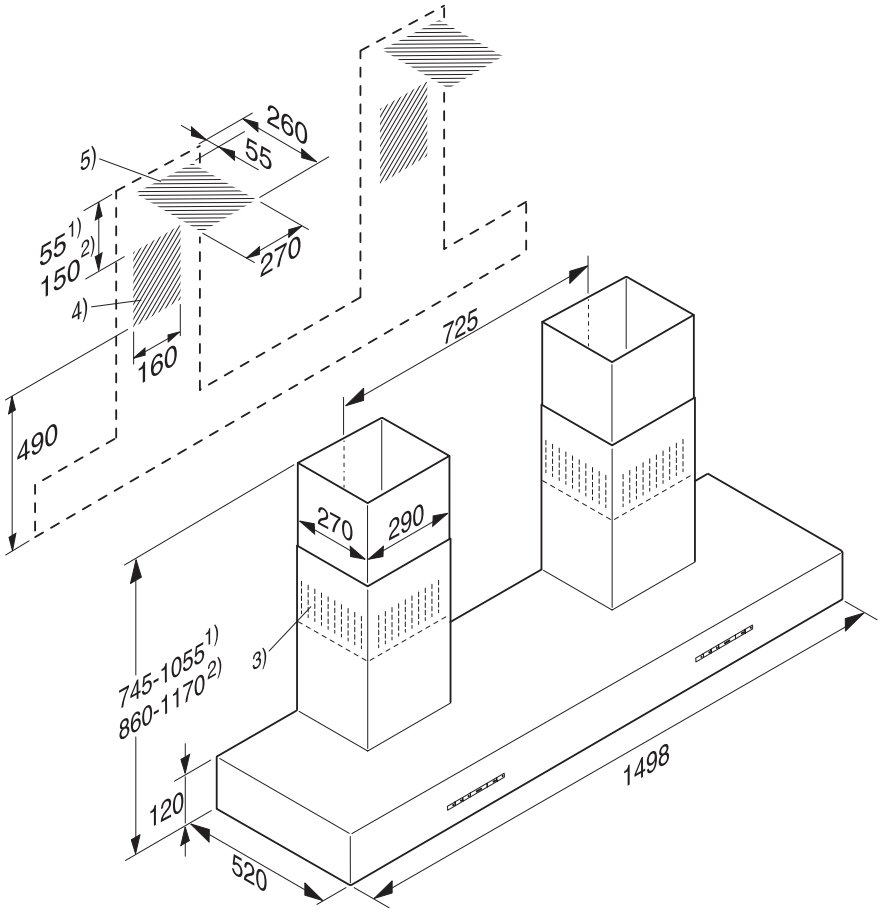

1) Extraction

2) Recirculation

3) Ventilation grille positioned at the top for recirculation

4) and 5)
The shaded areas represent the wall or ceiling area for the vent cut-outs and for fitting the connection sockets.
For recirculation mode, you only require cut-out area 4) and a connection socket for each tower.

Connection for air extraction
2 x ∅ 150 mm, or ∅ 125 mm with reducing collar.

Safety distance between hob and cooker hood (S)

When planning the installation height of your cooker hood, the **minimum** safety distance between the top of a cooker or hob and the bottom of the cooker hood are as follows, unless a greater distance is specified by the manufacturer of your cooking appliance:
– 450 mm above electric hobs and cookers,
– 650 mm above an open grill or deep fat fryer,
– 650 mm above gas hobs and cookers.
If this cooker hood is installed above a Miele Wok CS 1028 CombiSet appliance, a minimum safety distance of 760 mm must be maintained between the burner and the lower edge of the cooker hood.

See "Warning and Safety" instructions for further information.

– When deciding on the safety distance between the hob and cooker hood, please note that a distance of 650 mm above electric cookers/hobs may be preferable to give more working space under the hood.
– Account should also be taken of the height of the person who will be using the hood most often. The person should have sufficient space to work comfortably at the hob, and also be able to reach the hood controls with ease.
– Please be aware that if positioned too high, extraction will be inefficient.
– If you want the top of the cooker hood to be mounted flush with the ceiling, make sure there is adequate space below it for working. See maximum/minimum appliance height.

Installation

Installation accessories

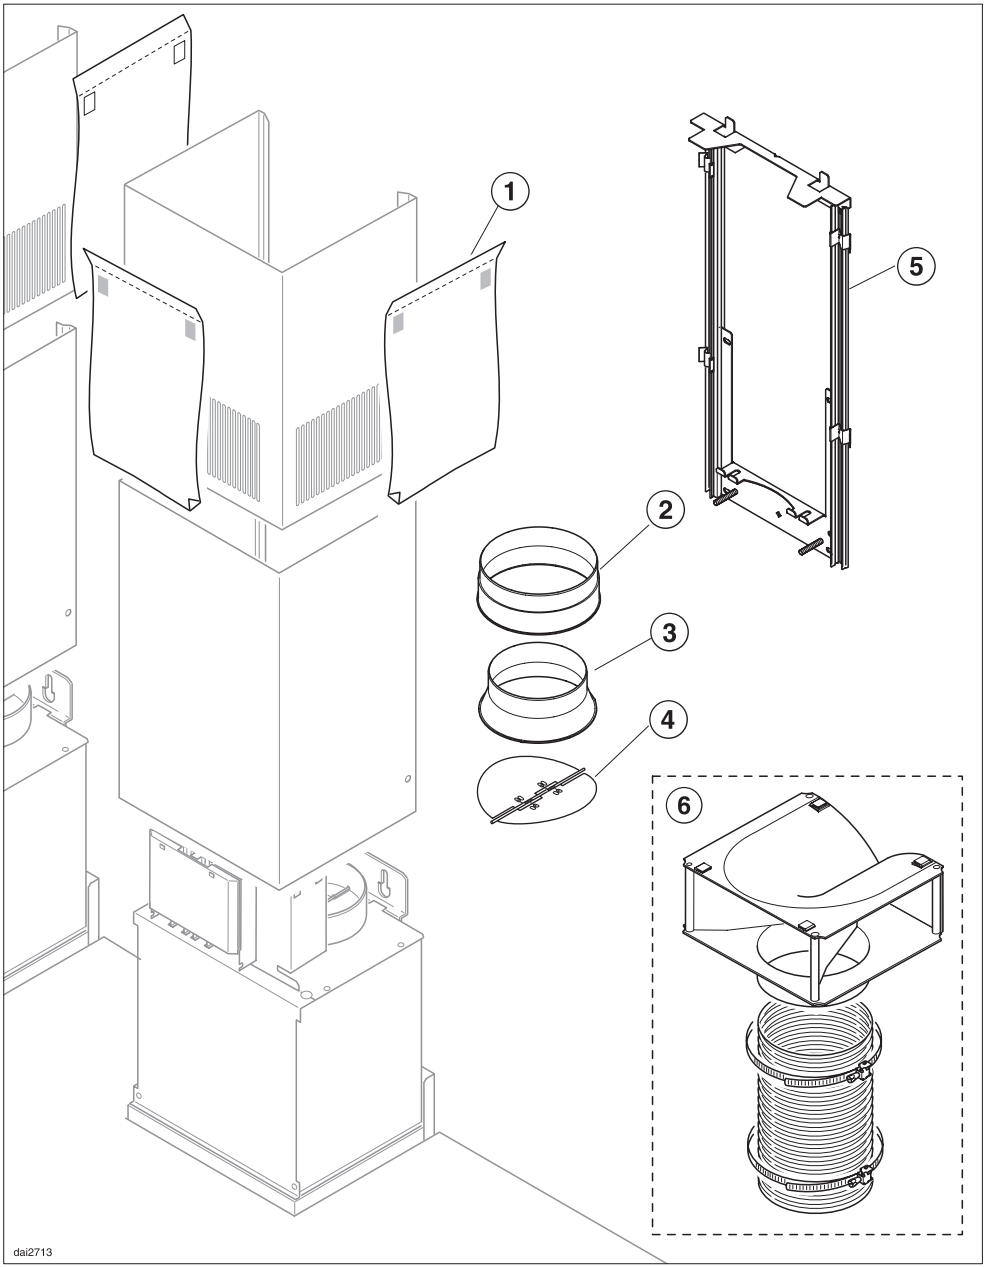

① **6 protective sheets**
for use when fitting the towers.

② **2 exhaust connections** for exhaust ducting ∅ 150 mm

③ **2 reducing collars**
for ∅ 125 mm exhaust ducting

④ **2 non-return valves**
for fitting into the exhaust connections on the motor units (for extraction mode only)

⑤ **Telescopic wall brackets** for securing the cooker hood to the wall.

⑥ **Conversion kit for recirculation mode**
including directional unit, flexible aluminium hose and hose clips (conversion kits are not supplied with the hood, but are available as an optional accessory - see Technical Data).
Two conversion kits are required.



12 screws 5 x 40 mm and
12 x S 8 plugs for securing the wall brackets.

⚠ The screws and plugs are designed for use in solid walls only. For other types of wall construction, alternative fixings will be required. Make sure that the wall is able to take the weight of the cooker hood.

4 x M 6 self-tapping nuts
for securing the appliance.

4 screws 3.9 x 7.5 mm
for securing the towers



1 lever
for dismantling the towers

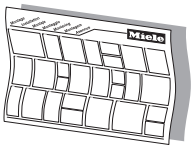

Installation instructions

Before installation, it is important to read the information given on the following pages as well as the "Appliance dimensions" and the "Warning and Safety instructions" at the beginning of this booklet.
This is particularly crucial when using the cooker hood at the same time as a heating appliance that relies on oxygen from the same room to avoid the danger of toxic fumes building up.

Installation instructions

See enclosed Installation sheet for instructions on how to install this appliance.

Protective foil

(on stainless steel appliances)

The housing components have protective foil around them to prevent them being damaged during transport.

Please remove this foil before fitting the housing components. It can be peeled off easily.

Dismantling

Should the appliance ever need to be dismantled, follow the installation instructions in reverse order as described on the installation sheet.

A lever is supplied to assist with the removal of the towers.

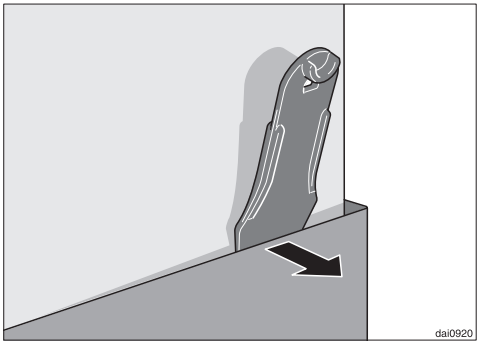

- After loosening the fixing screws on the tower, push the lever between the tower and the extension piece to lever the tower out of its fixings.

Important: To avoid the danger of toxic fumes, please observe the Warning and Safety instructions. This is especially crucial when using the cooker hood at the same time as another heating appliance which relies on air from the same room. The cooker hood should be installed according to local building regulations. Seek approval from the building inspector where necessary.

– Only use smooth pipes or flexible hoses made from non-flammable materials for the extraction ducting.

To achieve the greatest possible air extraction with the lowest noise level, please note the following:

– To ensure efficient air extraction, the diameter of the exhaust ducting should not be less than 150 mm.
– If flat ducting is being used, the cross-sectional area must not be smaller than the cross-sectional area of the exhaust connection.
– All ducting, pipework and fittings must be of non-flammable materials.
– The exhaust ducting should be as short and straight as possible.
– Only use wide radius bends.
– The exhaust ducting should not be kinked or compressed.
– Ensure that all connections are strong and airtight.
– Where ducting is horizontal, it must be laid to slope away at at least 1 cm per metre. This is to ensure that condensate cannot drain back into the cooker hood.
– If the exhaust air is to be ducted into the open air, the installation of a telescopic wall vents or roof vents (available as optional accessories) is recommended.

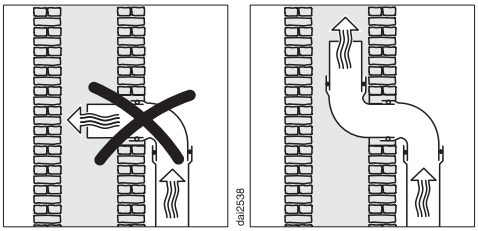

– If the exhaust air is to be ducted into a vent flue, the ducting must be directed in the flow direction of the flue.

Important:

If the exhaust ducting is to run through rooms, ceiling space etc. where there may be great variations in temperature between the different areas, the problem of condensation will need to be addressed. The exhaust ducting will need to be suitaly insulated.

Connection for air extraction

Condensate trap

(optional accessory)

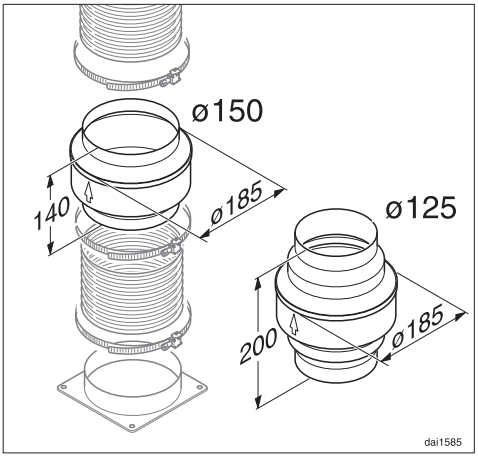

In addition to insulating the exhaust ducting, we recommend that two suitable condensate traps are also installed to collect and evaporate any condensate which may occur. Condensate traps are available for ∅ 125 mm or ∅ 150 mm ducting.

When installing a condensate trap, ensure that they are positioned vertically and if possible directly above the exhaust connection. The arrow on the housing indicates the direction of air-flow.

Silencer

(optional accessory)

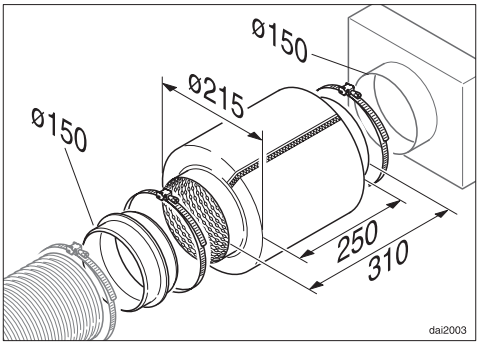

To achieve even further reductions in noise levels, special silencers can be fitted in the ducting system.

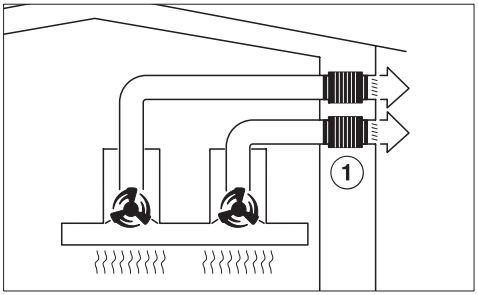

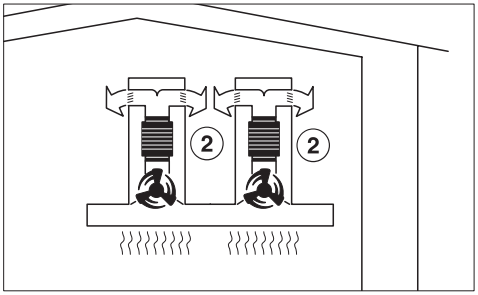

...with air extraction:

The silencers not only reduce noise from the fan, but also sounds from outside (e.g. traffic noise).
For this reason the silencers must be positioned as close as possible to where the ducting leaves the building ①.

...in recirculation mode:

The silencer need to be positioned between the fan and the deflector ②.
The space needs to be checked in some cases.

In all modes of operation, the most effective noise reductions are achieved if two silencers are fitted one behind the other in the system.

Electrical connection

All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous, for which the manufacturer cannot be held liable.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

The connection data is given on the data plate. This is visible when the grease filters have been removed. Ensure that this data matches the household mains supply.

This appliance requires two electrical mains cables. Each one must be connected via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations. Their On-Off switches should be easily accessible after the appliance has been built in. When switched off there must be an all-pole contact gap of 3 mm in each switch (including switch, fuses and relays according to EN 60 335).

If these switches are not accessible after installation (depending on country), an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA.

Important

This appliance is supplied for connection to an a.c.
230 V single phase 50 Hz supply.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow	= earth
Blue	= neutral
Brown	= live

WARNING:
THIS APPLIANCE MUST BE EARTHED

The Miele DSM 400 control module can be used to combine the cooker hood with other components.

As the right and left hand sides of the hood work independently of one another, two control modules are required for this.

Potential free connection

This can be used to operate a further appliance via the On/Off button ⏻ on the cooker hood.

If in any doubt, the advice of a competent builder or, for gas, a Gas Safe installer must be sought.

Connection to a light switch

The control modules can be used to switch on the cooker hood lighting and also to dim it via a light switch in the house, depending on model.

Installation

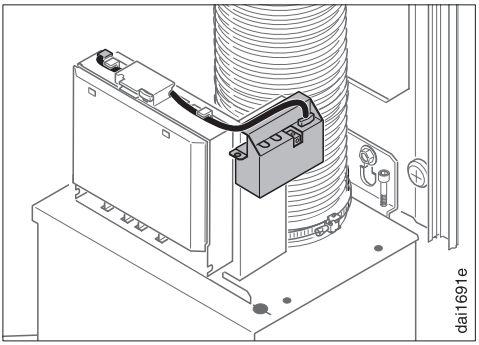

The control modules are fitted to the fan units after the towers have been dismantled.

The electrical connection of components to the control module must be carried out by a suitably qualified and competent person.

After Sales Service

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

– Your Miele Dealer / Chartered Agent

or

– The Miele Service Department (see back cover for address).

When contacting your Dealer or Miele, please quote the model and serial number of your appliance. These are shown on the data plate which is visible when the grease filter is removed.

For G.B.: Please note that telephone calls may be monitored and recorded for training purposes.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See back cover for contact details.

In the U.K. your appliance is guaranteed for 2 years from the date of purchase. To activate your cover call 0845 365 6640 or register online at www.miele.co.uk

Total connected load. . . . . 520 W
– Fan motors . . . . . 2 x 200 W
– Hob lighting . . . . . 6 x 20 W

Voltage . . . . . AC 230 V

Frequency . . . . . 50 Hz

Fuse rating . . . . . 13 A

Electrical cable length . . . . . 1.5 m

Weight . . . . . 52.2 kg

Fan performance according to EN 61591

Extraction system ducting ∅ 150 mm:
Level I . . . . . 350 m^3/h
Level II. . . . . 600 m^3/h
Level III . . . . . 800 m^3/h
Level IV Intensive Setting . . . 1,300 m^3/h

Recirculation with charcoal filter:

Level I . . . . . 250 m^3/h
Level II. . . . . 420 m^3/h
Level III . . . . . 660 m^3/h
Level IV Intensive Setting . . . . 980 m^3/h

Special accessory for recirculation mode:

– 2 conversion kits DUW 20

– 2 Miele charcoal filters DKF 12-1

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China
Miele (Shanghai) Trading Ltd.
1-3 Floor, No. 82 Shi Men Yi Road
Jing' an District
200040 Shanghai, PRC
Tel: +86 21 6157 3500
Fax: +86 21 6157 3511
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Miele (Hong Kong) Limited
41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

India
Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Manufacturer: Germany - Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh

Ireland
Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

New Zealand
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved / 3011

M.-Nr. 09 203 290 / 00

CE